



LG Rumor Touch Camera Lens Replacement

By following these procedures, you will successfully be able to replace the camera lens in your LG Rumor Touch cell phone.

Written By: Andrew Hodges



INTRODUCTION

If your LG Rumor Touch needs a camera lens replacement, these are instructions to safely remove the camera lens.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [LG Rumor Touch Camera Lens](#) (1)
-

Step 1 — Battery



- Remove the phone's back cover by placing your thumb the above charging port, located at the bottom of the phone, and sliding the back cover upward.

Step 2



- Gently pry the battery out of the phone with the spudger.

Step 3 — Inner Shell



- Unscrew the 5 #1 5mm screws.

Step 4



- Lift the inner shell from the phone.

Step 5 — Camera Lens



- Push the camera lens through its socket, from the inside out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-01 07:31:31 PM.